



JTAG ARM 20-pin
Reset
C93
C92
C91

ZQ2
C87 C88
C85 C86
ZQ1

R190
R189

R144 C205
R142
R146 C206
R145
R143
R134
R136
R139
R138
R141
R140
C210
L20
C215
C216
R137
C207
C209
GND
RTC
ZQ4

D3.3V1

C225

C12
C73
C72
VDDQ
C71

D5.0V
B2
Butt ON

X2
R149
R153
R148
R152
R151
R37
C84
C83
C102
C103
C106
C104
C105
DD3
C82
C81
NAND

AM1808
R46
R40
R41
R38
R39
R188
R147
DD1

DDR2
R1
R2
R3
R6
R7
R8
R13
R20
C22
C27
C35
C34
C33
C78
R26
Q1
C75
R21
R12
R19
C23
C24
C25
C77
R34
R33
C146
D2
R58
C158

L1

Power Led
D4
L10

USB_Fault
D1
R96
R97
C8
DA5
DA17
C100
R184
D3.3V2
C121
C122
C119
C120
C124
C123
R49
LD01_D1.8V
C11
R25
R24
VTT
C50
C49
C43
C46
C47
C44
C45
C16
R16
R17
R18
C17
R74
R75
R99
C70
R32
C154
C157
C147
C136
DA2
C155
R68
R69
R67

LD02_D1.2V
BOOT0
BOOT1
BOOT2
BOOT3
BOOT4
BOOT5
BOOT6
BOOT7
SW1
R53
R54
R55
R56
R57
R62
R63
R83

SW1
Reset
R82
R81
R91
R92
R93
R94
R95
R73
R84
Q4
R61
R60

DA1
C76
C69
C137
C136
DA3
B1
L7
L8
L9

